 


Groupwork™ Screen Assembly



turnstone®

NOTE: DO NOT remove the plastic shrink wrap from the screen assembly until the legs have been installed.


Optional Full Tray

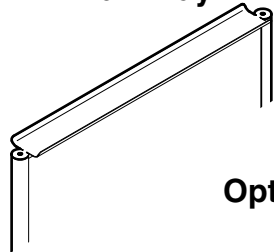


Optional Top Cap with Pegs (Factory Installed)

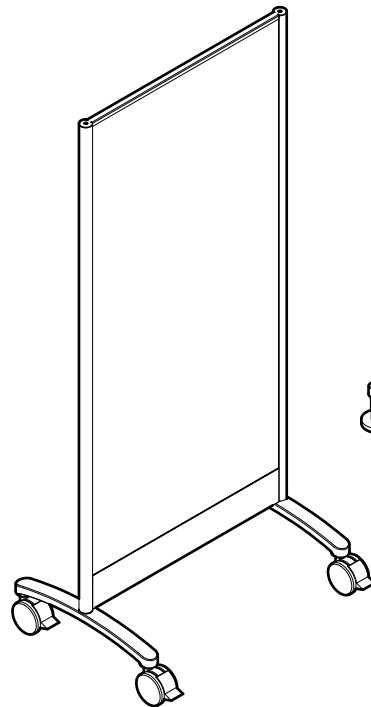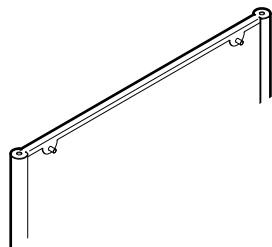



Screen Assembly with Double Leg

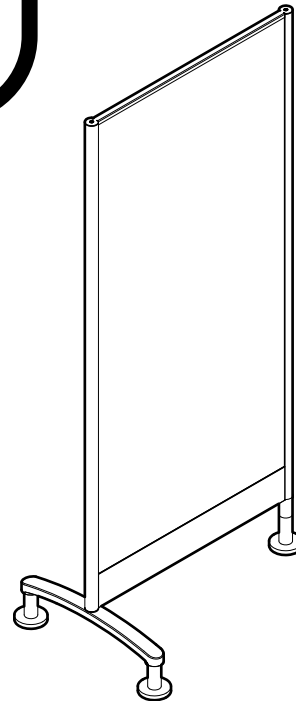


Screen Assembly with Single Leg and Glides

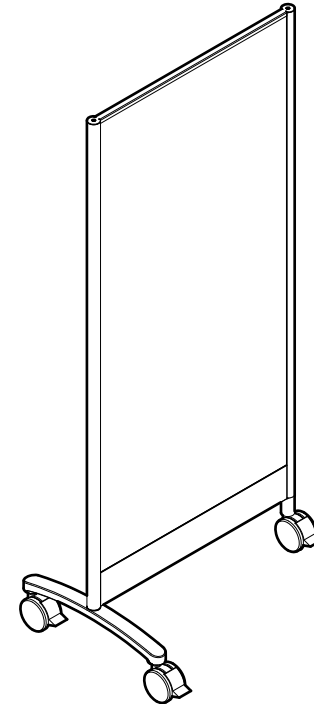


Screen Assembly with Single Leg and Casters

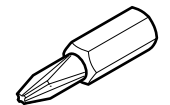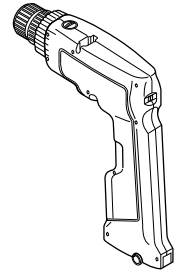

PHILLIPS DRIVE

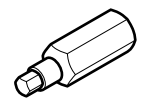


HEX DRIVE

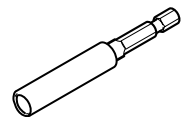


Screen Assembly with Double Leg

1. Remove the hex drive screw from the bottom of the vertical extrusion and discard. Remove and assemble each foot completely before removing the screw on the other side.
2. Mount the leg to each side of the screen assembly using the hex drive 1-1/2" long screw provided. Notice the orientation of the half moon shaped emboss on the top of the leg.

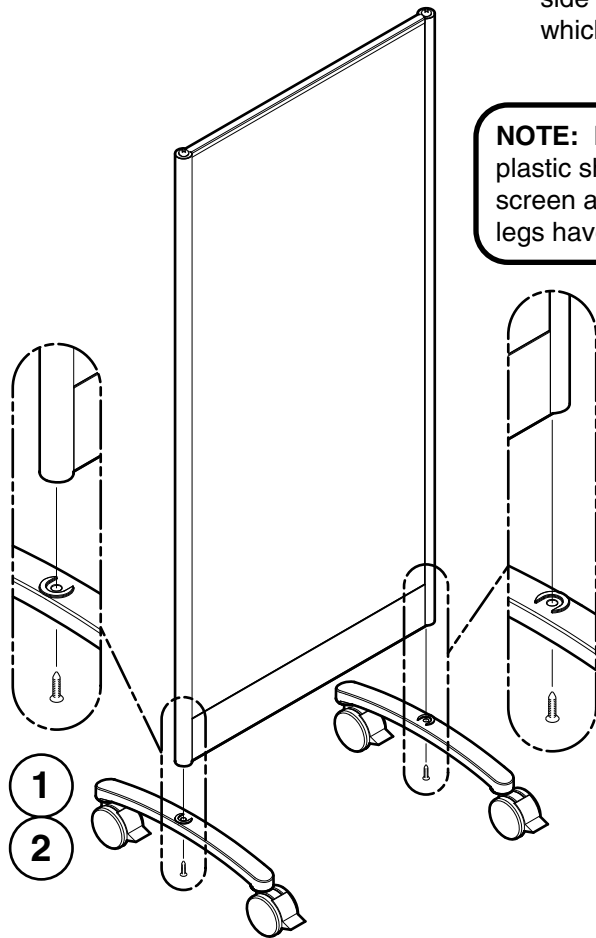


Screen Assembly with Single Leg

1. Remove the hex drive screw from the bottom of the vertical extrusion and discard.
2. Mount the leg on one side of the screen assembly using the hex drive 1-1/2" long screw provided. Notice the orientation of the half moon shaped emboss on the top of the leg.
3. Mount the caster or the glide to the opposite side of the screen assembly, depending on which style you have ordered.

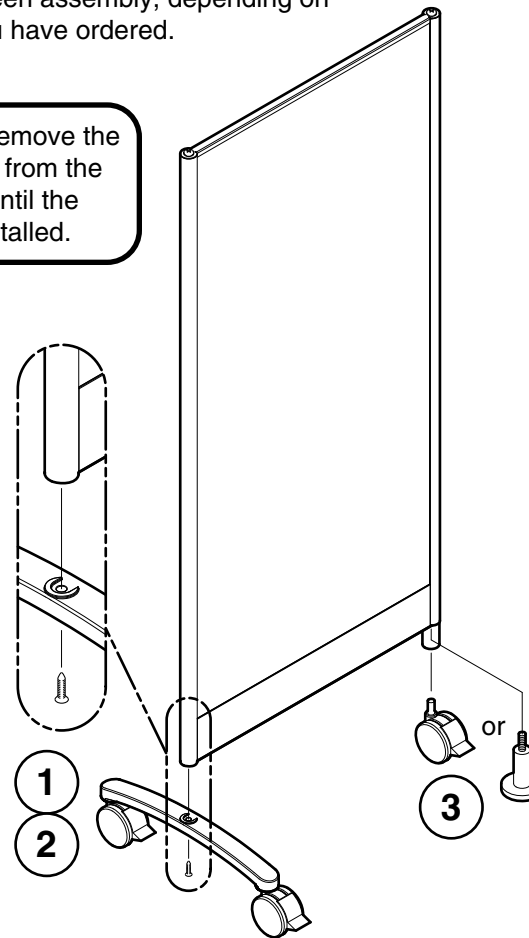

Installation of the Optional Full Tray

1. Remove the pan head, phillips drive screw from each side of the screen assembly. Remove and assemble one screw at a time.
2. Place the full tray on top of the screen assembly and reinstall the same screws.

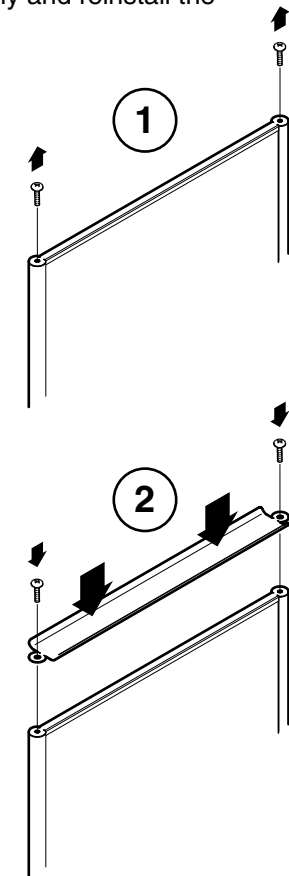

turnstone